


Hello!

We have created an easy use system, making our product quick to pack, saving you time and money. Below are the key steps to ensure your product is packed correctly. If you require suitable boxes, we work in partnership with high quality suppliers who offer outer cartons specifically made to work with our moulds. Contact us for more information. If you wish to use a local box supplier, we are happy to discuss the box specifications etc. with you. Confirmation of correct type of box will be required to ensure that the moulds are secured effectively.


THE BOX & TAPE

Make sure you have the correct box size for the moulds. This is essential to ensure the moulds are held securely in place during transit. If you are unsure on which box size you require please contact us and we can help.

The box should be taped up using the **H** pattern method. Taping up both edges and the centre fold of the box. This stops the box edges from snagging during transit.

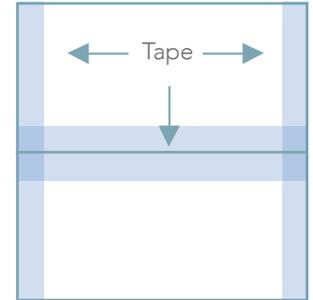

STEP TWO

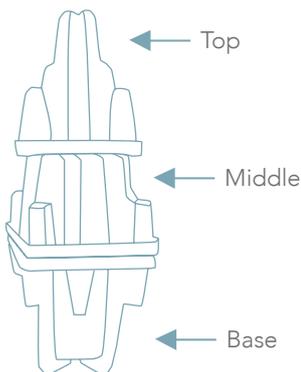

THE PRODUCT & MOULDS

Check you are using the correct mould for the product. This is essential to ensure the moulds absorb the vibrations and shocks during transit.

The 3-part sets have a top, middle and base. The 2-part sets have a top and base only. The **top** has a long neck. The **middle** is open top and bottom to go over the bottle. The **base** has a raised bottom that absorbs any vibrations incurred to the base of the box.

STEP THREE

PACKING YOUR PRODUCT

- 1 Make the box up using the using the **H** pattern method described above.
- 2 Place the base mould in the bottom of the box.
- 3 Insert your product into the base mould.
- 4 **3-Part Set Only.** Slide the middle mould directly over the neck of the bottle and slide until it sits on the base mould.
- 5 Place the top mould over the bottle neck until it sits on the mould below.
- 6 Close the flaps of the box ensuring they press firmly down onto the top mould. This is **very important** as the moulds must be held firmly in place by the box.
- 7 The box should be securely taped again using the **H** pattern method described above.

! The box flaps must push down and be secured tightly on the mould to ensure no movement.

